



Congratulations on the purchase of your new DMI Sports Table hockey table. Our products are designed and manufactured to give you years of game playing enjoyment.

KEEP BOX AND PACKING MATERIAL UNTIL TABLE HAS BEEN COMPLETELY ASSEMBLED.

ALL DAMAGE MUST BE REPORTED TO DMI WITHIN TEN DAYS OF RECEIPT.

If you have any problems with your new product,

PLEASE DO NOT RETURN IT TO THE STORE.

Please contact us:

1.800.399.4402

FAX: 215.283.9573

Please have your model number when inquiring about parts.

Or write to:

DMI Sports

Customer Service

375 Commerce Drive

Fort Washington PA, 19034

Please visit our web site at:

www.dmisports.com

When contacting DMI Sports, please provide your model number and item number (if applicable) if requesting a replacement part. Item numbers can be found inside this owners manual.

Your Model Number HT250

Your model number is also located on the original carton. These instructions are also available online at: www.dmisports.com.

IMPORTANT!

Please Keep Your Instructions! (You will need your Model number should you need to contact us.) Before attempting assembly, please read through this instruction book to familiarize yourself with all the parts and assembly steps. We recommend that two adults assemble this table. Please refer to the Parts Identifier on the following page and be sure that all parts have been included. Although extremely rare, occasionally a part may be missing. If you are missing a part, or if you have any questions, please call our customer service department at 1.800.399.4402 Mon-Fri between the hours of 9:00am and 5:00pm E.S.T; or you can reach us at: www.dmisports.com.

Do not return the game to the store. Please contact us first at: 1.800.399.4402 or on our website at: www.dmisports.com.

TWO ADULTS ARE REQUIRED TO ASSEMBLE THIS HOCKEY TABLE








TOOLS REQUIRED FOR ASSEMBLY:



 
- Phillips Head Screw driver- Not Included
- Level recommended- Not Included
- Wrench - Included

PARTS IDENTIFIER





 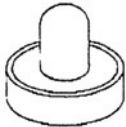


HARDWARE PARTS

H1	Qty. 16	H2	Qty. 16	H3	Qty. 8	H4	Qty. 10	H5	Qty. 6
									
Leg Bolt RPHT250-HKIT		Washer, Leg RPHT250-HKIT		T4x25mm Bolt RPHT250-HKIT		T3.5x18mm Screw RPHT250-HKIT		T3.5x12mm Screw RPHT250-HKIT	

ACCESSORY PARTS

A1	Qty. 4	A2	Qty. 2	A3	Qty. 1
					
Pusher RPHT-PUSH		Goal Flex™ Puck RPHT-GFPUCK		Wrench RPHT-AWRENCH	

ASSEMBLY PARTS

P1	Qty. 1	P2	Qty. 2	P3	Qty. 2	P4	Qty. 2
							
Main Frame RPHT250-FRAME		Panel, Leg RPHT250-LEGPANE		Left Leg RPHT250-LLEG		Right Leg RPHT250-RLEG	
P5	Qty. 2	P6	Qty. 1	P7	Qty.1		
							
Goalflex80™ Goal RPHT250-GOAL		Goalflex80™ Console RPGF80-CONSOLE		Console Holder RPHTGF80-HOLDER			

ASSEMBLY

NOTE: Please leave Main Frame (P1) face down in the carton that it ships in until the legs are attached. All images are shown UP-SIDE-DOWN until the table is turn up on its legs. Unpack all contents and lay out on the floor. Verify all parts listed on parts identifier are present.

STEP 1.

Place two Left Legs (P3) and Right Legs (P4) on flat surface with six pre-drilled holes facing up. Using four Screws (H3), attach to Leg Panel (P2). Repeat for second set of legs.

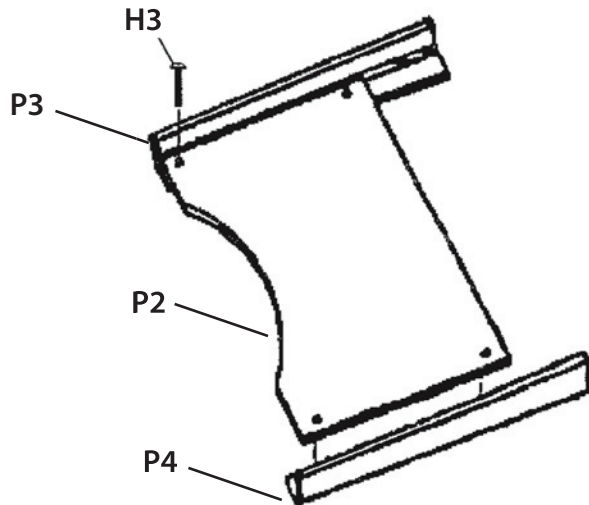


FIG 1.1

STEP 2.

Place Main Frame (P1) UP-SIDE-DOWN on carton. Attach assembled Leg & Leg panels to Main Frame (P1) using sixteen Leg Bolts (H1) and sixteen Leg Washers (H2). Place washers on leg bolt and screw to leg through holes in underside of table. Tighten all bolts with fingers, then tighten with wrench provided.

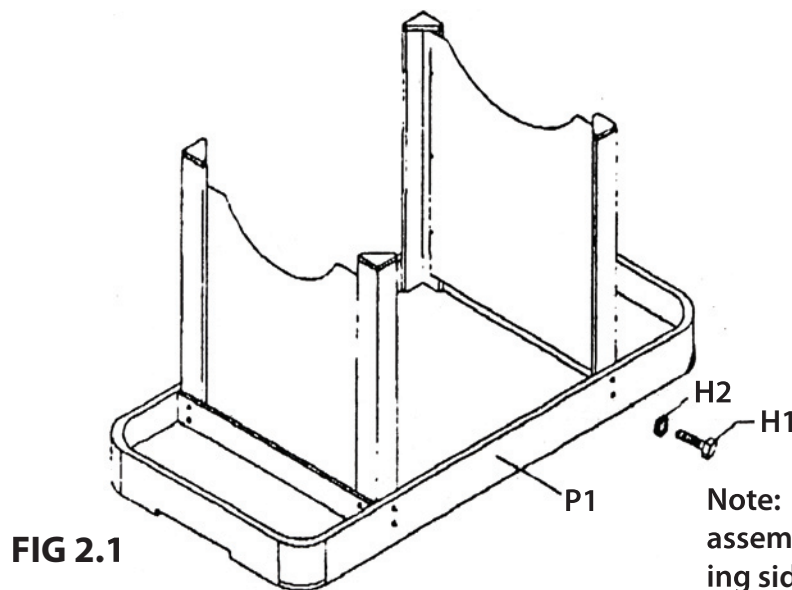


FIG 2.1

Note: Do not turn table over during assembly without assistance. Applying sideways pressure on the legs will result in breakage, which is not covered by the warranty.

ASSEMBLY

STEP 3.

Carefully turn table upright with assistance.

STEP 4.

Attach Goalflex 80™ Goal (P9) to both ends of the table as shown in Fig. 3.1 using eight Screws (H4) in the pre-drilled holes in the ends of the table. Be sure to run the wires through the space provided between the play surface the the end panel as shown in Fig. 3.1. Attach the Console holder (P7) to the side panel with the hole in it using Screw (H4). Attach the Electronic console (P6) to the holder. Run the two wires from the electronic console down through the holes before securing the console using Screw (H4) and attach the console wires to the wires from the Goalflex 80™ goal system beneath the table.

