




Assembly Instructions ELITE TABLE

The movements of the drawing stands are balanced by means of compensated springs, that, if necessary, can be adjusted.

TECNOSTYL S.p.A.
Via Trieste, 11 - 20050 SEGRATE (MI)
C.F./P. IVA 06684200154
Tel. 02/869141
Fax 02/1691524 - 49

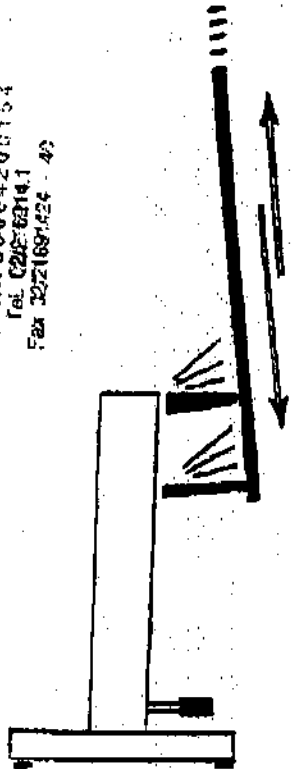

LIGHTER SPRING →

Fig.A

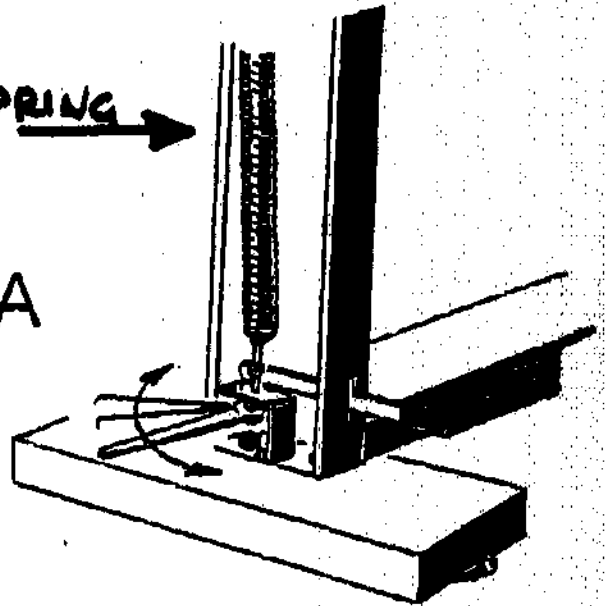


Fig. A: adjustment of the elevation movements balance

SHORT SPRINGS. YOU CAN REMOVE ONE OF THEM IN CASE THEY ARE TOO STRONG!

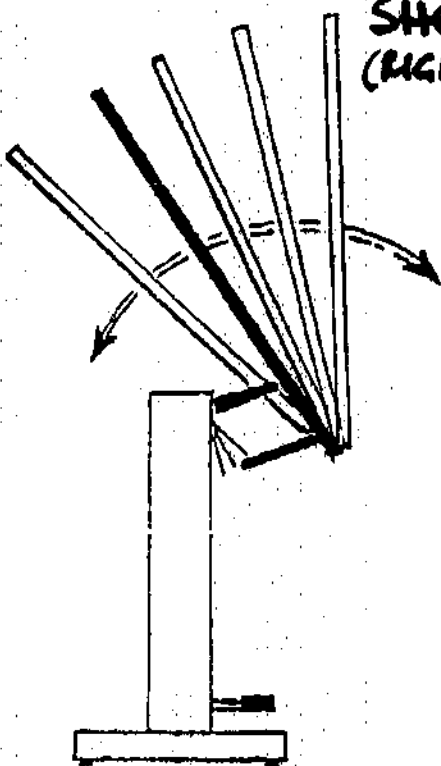


Fig.B

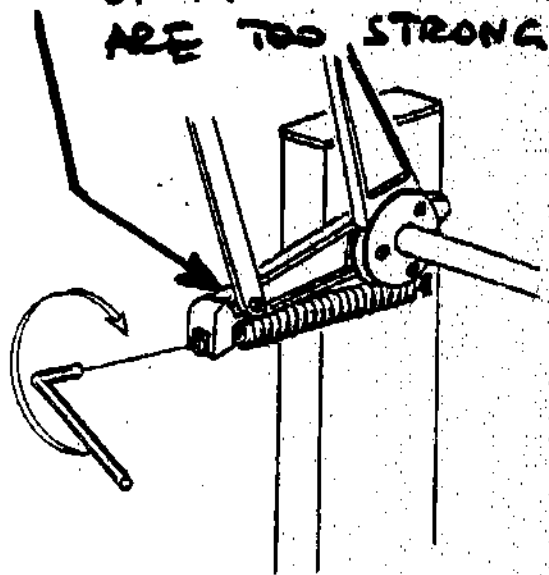


Fig. B: adjustment of the inclination movements balance






Assembly Instructions


ELITE TABLE

Assembling instructions for stand

Remove the cover A from the side B unscrewing the screw 1.
Put the bolts 2 of the element C in the holes of the side B, then fix the nuts 3 with the spanner supplied

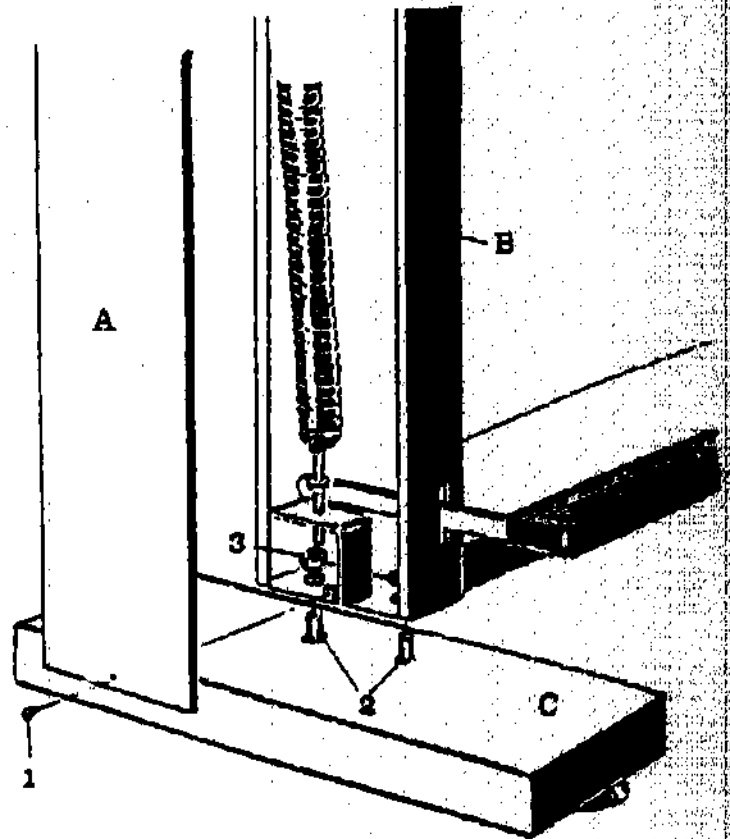

TECNOSTYL S.r.l.
Via S. Maria, 11 - 02022 SERRAIE (PG)
C.P. 102 - I.V.A. 044994200154
Tel. 0221631421 - 40

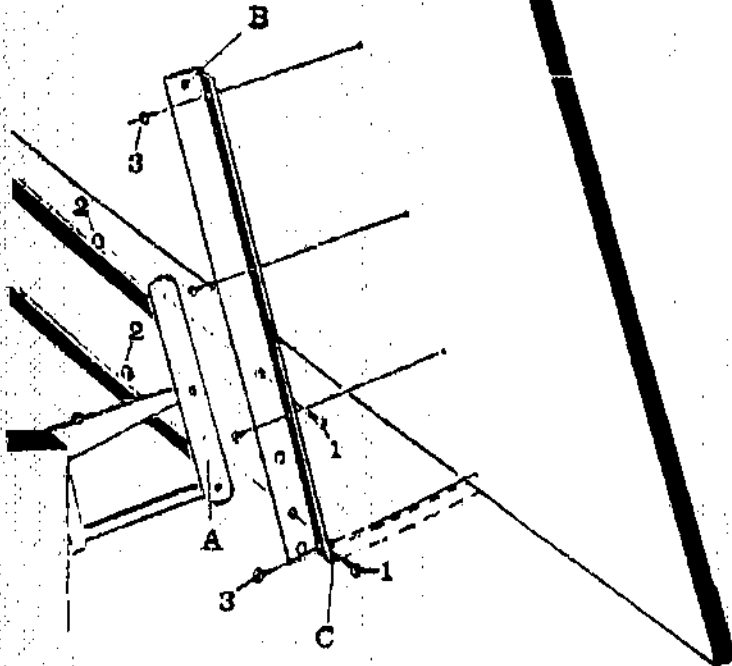

Instructions for board assembling

Fix the uprights B on the elements A with the screw 1 and the nuts 2, then lean the board on the steps C and fix it to the upright B with the screws 3.

THE STEPS C ALLOWS AN EASY ASSEMBLING OF THE BOARD BY ONLY ONE PERSON

