


QUOIZEL

6 CORPORATE PARKWAY
GOOSE CREEK, SC. 29445
www. quoizel. com

INSTALLATION INSTRUCTIONS

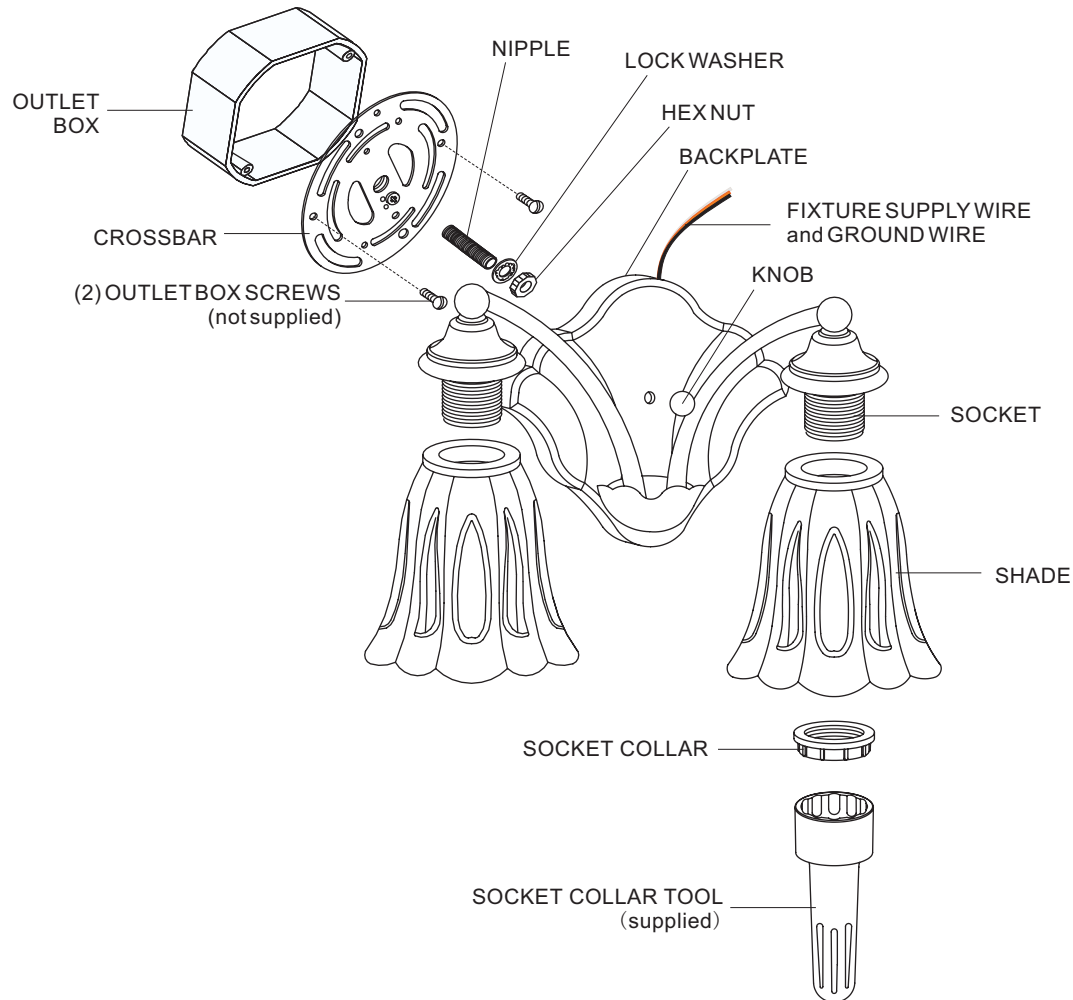

1. Before beginning installation, carefully unpack and identify all parts referring to illustration.
2. Turn electrical power to installation point OFF at circuit breaker.
3. Locate the CROSSBAR and secure it to the OUTLET BOX with (2) OUTLET BOX SCREWS(not supplied). Thread the end of the NIPPLE into the center of the CROSSBAR. Locate the LOCK WASHER over the NIPPLE and thread the HEX NUT onto the NIPPLE. Pass the mounting hole in the center of the BACKPLATE over the end of NIPPLE. There should be just enough nipple length protruding from the mounting hole for the KNOB to thread onto and hold the BACKPLATE against the wall. If the length is satisfactory, remove the BACKPLATE and snug HEX NUT against the CROSSBAR with pliers to secure the NIPPLE.
3. **Make the connections:**(Quoizel recommends 2 people for this step) Use wire connectors (not supplied) attach the HOUSE GROUND WIRE to the FIXTURE GROUND WIRE; connect the HOUSE WHITE WIRE to the FIXTURE WHITE (or RIBBED SIDE) SUPPLY WIRE; connect the HOUSE BLACK (or RED) WIRE to the FIXTURE BLACK (or SMOOTH SIDE) WIRE. Wrap each connection with approved electrical tape.
4. Carefully tuck all the wires into the OUTLET BOX and mount the BACKPLATE by passing the hole over the NIPPLE. Secure it against the wall by threading the KNOB onto the end of nipple. Tighten until snug.
5. Position the SHADE over the SOCKET as shown. Use the SOCKET COLLAR TOOL (supplied), thread the SOCKET COLLAR onto the SOCKET to secure the SHADE and hand tighten until snug.
6. Install bulb (s) referring to fixture markings and/or labels for maximum wattage.
7. Restore power to the installation point ON. Retain this sheet for future reference.

**IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,
CONSULT A LICENSED ELECTRICIAN!**

IS-KN8602
2007-08-18