 


# insta-bed™

U.S. Patent No. 5827052  
Multiple patents pending

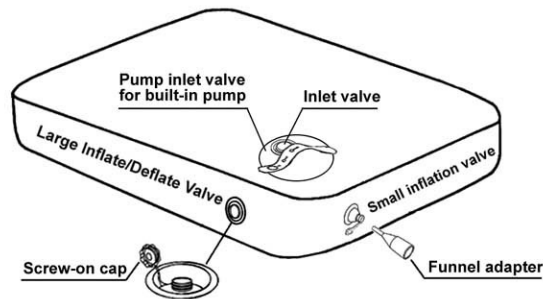

Style: 822315.1-TWIN  
822316.1-FULL  
822317.1-QUEEN

## USE AND CARE INSTRUCTIONS

1. DO NOT operate the pump with air openings blocked. Keep air openings free of lint, hair, and other obstructions.
2. DO NOT over inflate.
3. DO clean airbed with only mild soap and water.
4. DO NOT unfold or inflate the airbed in temperatures below freezing.
5. DO protect from contact with sharp objects and rough ground.
6. DO NOT use as a water float or life saving device.

### NOTE:

Airbed material may stretch during first use and may need additional air to reach desired firmness. Air inside of bed may expand and contract with varying temperatures potentially leading to reduced pressure inside of the bed. If this occurs, simply add more air using the built-in pump to achieve desired firmness.

### REPAIRING: (Repair Kit Included)

First, deflate the bed by following the instructions for deflation. For small puncture holes, tears or cuts, cut a small piece of PVC patch material and apply patch. Allow at least four hours for repair to set before attempting to inflate the airbed.

## TO INFLATE USING THE BUILT-IN PUMP


**Note:** There is no cap to remove during this process.  
Do not get sand or dirt near this pump it will affect the performance.



1. To operate the built-in pump properly, it is necessary to let some air enter the air bed by shaking the pump strap before you begin pumping.




2. Screw on the inflate/deflate valve to close.

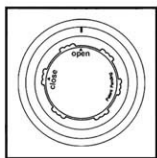

3. Turn Comfort Adjust Pump™ counter-clockwise to align with "open" for inflation.




4. Now you are ready to start pumping. Alternate between pulling up on the pump strap with one hand and pushing down on the pump with the other hand. Or if you prefer, you may use your foot to lift up the pump strap and then press down to inflate. (Note: If using your foot, be careful to avoid blocking the pump air inlet.)

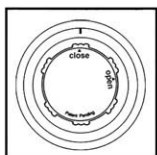


5. Turn Comfort Adjust Pump™ clockwise to align with "close" after inflation. The airbed is now ready for use.

## OPTIONAL INFLATION METHODS

The large deflate valve as well as the small inflation valve may also be used for ordinary inflation.

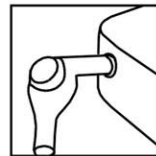

1. Hair Dryer  
Do not use heat setting. Set to cool, place nozzle of hair dryer over large inflation valve and fill.

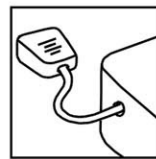

2. Canister Vacuum  
Connect vacuum hose to exhaust hose of vacuum and inflate through the large inflation valve as shown. If inflating through the small inflation valve, use the funnel adaptor provided with the air bed.



3. Bellows Pump  
Place nozzle of pump into small inflation valve and fill.

### TO DEFLATE:

1. Unscrew and the deflate valve.
2. Force all air toward the valve opening.
3. Continue until all air is removed and bed is approximately the same size as when you received it.
4. Begin folding toward the valve openings once air bed is reasonably flat.

American Recreation Products, Inc.  
St. Louis, Missouri 63141  
1-800-325-8368  
www.insta-bed.com