


side view

Hang hammock from u-bolt to u-bolt

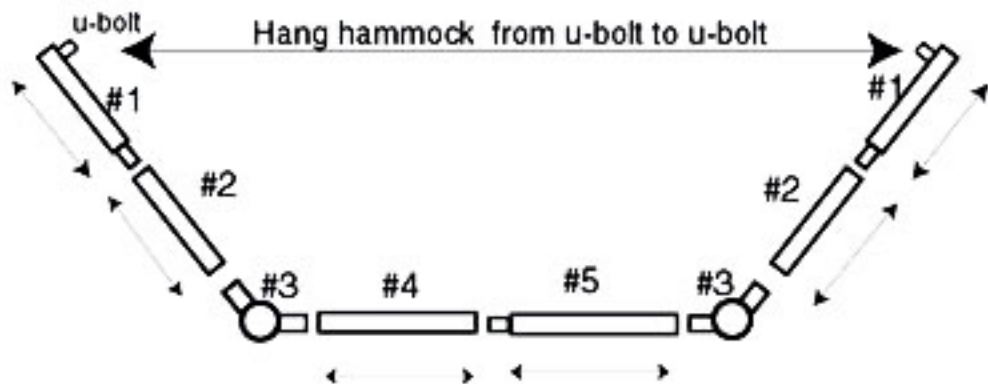

plan view

Assembly instructions

Simply slide all parts of the frame together. Part #5 spigot slides into open end of #4, 2 open ends of #4 & #5 now slide onto spigots of foot base #3. Both #2 can now also be placed on the top side of foot base #3 spigots. #1 is now placed at either end of #2. U-bolts should now be positioned at either end of the frame. It is now time to hang the hammock using clips and chain. Tension of the rig can be adjusted by shortening or lengthening the chain at either end.

