


# Bed Assembly Instructions


## Parts And Fittings Packing Detail

**Box # 1**

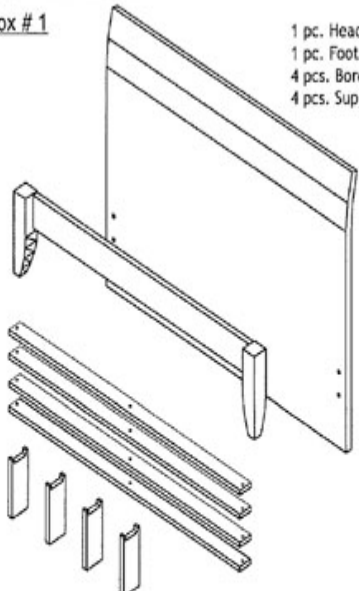


1 pc. Head Board  
1 pc. Foot Board  
4 pcs. Bored Slat  
4 pcs. Support Leg

**Box # 2**

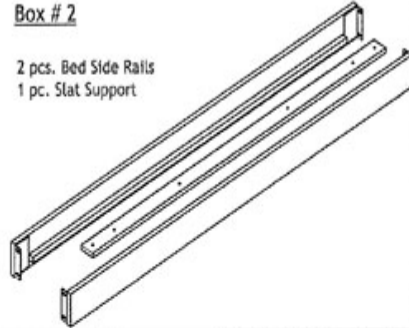


2 pcs. Bed Side Rails  
1 pc. Slat Support

**Optional Slats**

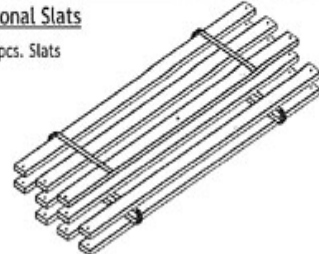


10 pcs. Slats

**Hardware Pack in Box #1**

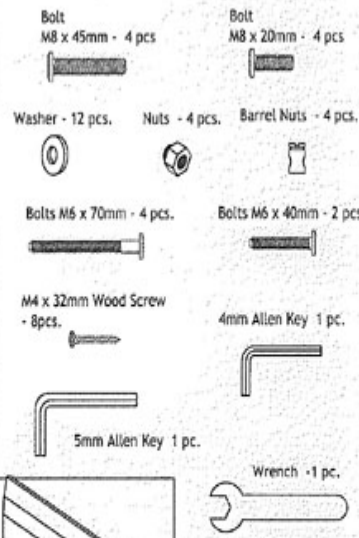


Bolt M8 x 45mm - 4 pcs  
Bolt M8 x 20mm - 4 pcs  
Washer - 12 pcs  
Nuts - 4 pcs  
Barrel Nuts - 4 pcs  
Bolts M6 x 70mm - 4 pcs  
Bolts M6 x 40mm - 2 pcs  
M4 x 32mm Wood Screw - 8 pcs  
4mm Allen Key 1 pc.  
5mm Allen Key 1 pc.  
Wrench - 1 pc.

Page 1 of 2



**LIFESTYLE SOLUTIONS**  
The Fusion Of Function And Comfort With Style

## RETRO BED

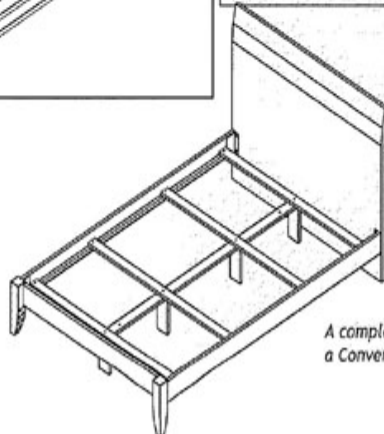

**Slat Hardware**  
32mm Screw - 20pcs.  
(Wrapped in separate plastic bag)

*A complete assembled view of a Conventional Bed*

# Bed Assembly Instructions **RETRO BED**

## Step 1/Diagram 1

Fix both side rails to the Head Board and Foot Board as shown in diagram 1 with the 20mm and 45mm bolts and washers.

## Step 2/Diagram 2


Spread out all the slats on to the slat support and fasten it down with 2nos M6 x 40mm bolts at the second hole at both ends with pre-inserted nut facing down as shown in the diagram 2.

## Step 3/Diagram 3

Further secure the pre-drilled slats to the slats support and support legs with 4nos M6 x 70mm bolt as shown in diagram 3.

## Step 4/Diagram 4

Finally, place both ends of the assembled slats in the bed frame resting on both sides of the side rails and screw them in place with the 32mm screws provided as shown in diagram 4.

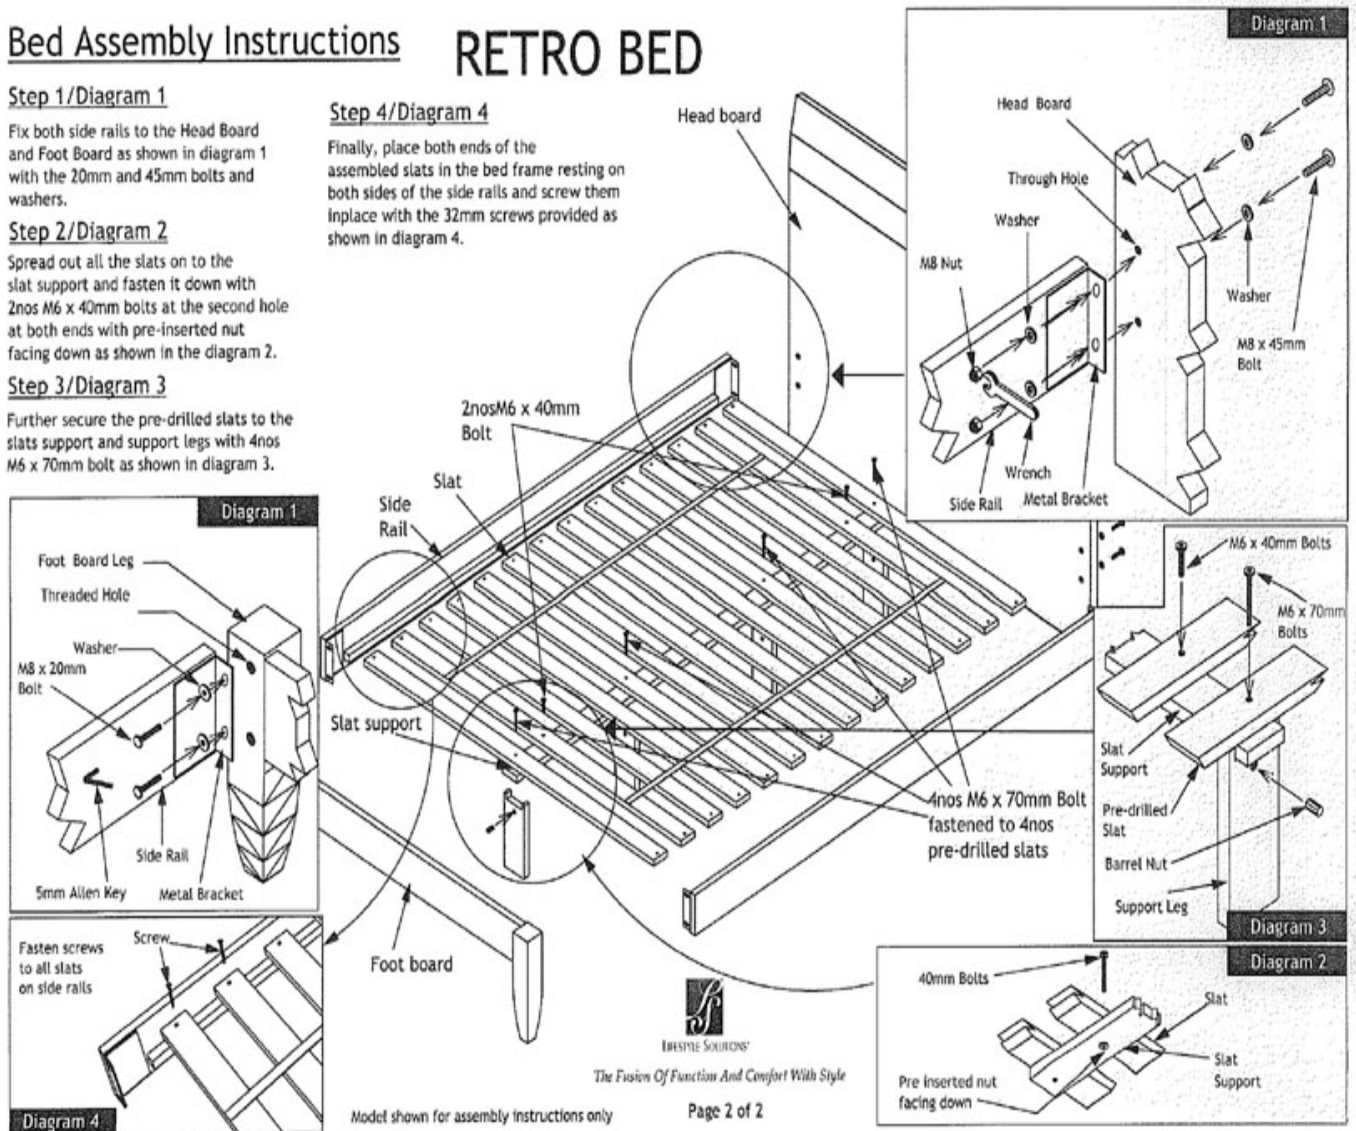

The Fusion Of Function And Comfort With Style

Model shown for assembly instructions only