

E-Frame

Assembly Instructions

STOP!

Please read the following important information!

For questions on assembly or parts, **DO NOT RETURN** product to the store. Contact the experts at Elite Products by calling **TOLL FREE.**

1-800-338-8667

Available Mon-Fri (8am-4pm) Pacific Standard Time



By Elite Products

(Please keep this for future reference)

E-frame Assembly Instructions Sheet














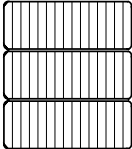



For questions on assembly or parts, DO NOT RETURN this product to the store.


Contact experts at Elite Products by calling TOLL FREE 1-800-338-8667

Please check parts list for correct hardware count. If the futon arms came in a separate box some hardware may be packed inside. The quantities listed are the minimum required, you may receive extra hardware.

Parts List

Metal Components and Hardware

- A**  Mattress Framesupport x1 piece
- B**  Square Tube Leg x 2 pieces
- C**  Curved Tube Support Leg x 1 pieces
- D**  Curved Tube Support Leg x 1 pieces
- E**  Support Leg x 2 pieces
- F**  Gripper Foam Pad x1 piece
- 1**  5/16" x 2 1/2" Flat Allen Bolts x4 pieces
- 2**  5/16" x 1 1/2" Flat Allen Bolts x4 pieces
- 3**  5/16" x 1 1/2" Rounded Allen Bolts x2 pieces
- 4**  5/16" x 3/4" Flat Allen Bolt x4 pieces
- 5**  5/16" Lock Nuts x10 pieces
- 6**  5/16" x 1/2" Rounded Allen Bolt x2 pieces
- 7**  5/16" Metal Washer x4 pieces
- 8**  1/2" Allen Wrench x1 piece
- 9**  Allen Key x3 piece
- 10**  Insert Allen Nuts x4 piece
- 11**  Transmission x2 piece

G  Horizontal crossbar x 2 pieces



Sofa Position



Sleeper Position

Assemble

Step 1



Step 2



Step #1

Attach **Part A Mattress Frame** (Seat, center and back section, Please note the back section will be the largest sections) to **Part B Square Tube Legs** in front two channels on each side using the 2 ½" Flat Allen bolts, metal washers and lock nuts. Use Allen key and Allen wrench to tighten all bolts.

Step # 2

Attach the **Transmission Hinges** to the center mattress frame section using 1 ½" Rounded Allen bolts and lock nuts. The rounded section of the Transmission Hinge must be facing the front with the angle facing toward the back.

Step #3

Attach **Part C & D** the two Curved Supporting Legs tubes together using the small 1/2" Rounded Allen Bolts. **Do not tighten completely until Step 4 is completed.**

Step #4

Attach the Curved Support Legs to the transmission pieces using 1 1/2" Rounded Allen Bolts from the outside and locking nuts on the inside. Do not tighten too snug or firm this section must be able to swivel. Now tighten **Part C & D** together. Refer to *Step 4*

Step 3 - 4



Step 5



Step # 5 Attach **Part E** Back Support Legs to the back section using 3/4" male Flat Allen bolts from the Underside of the frame and 5/16" female Insert bolts from the top of the frame.

To insure proper support and long lasting enjoyment of your futon periodically retighten bolts. Also, it is recommend that you flip your mattress periodically to ensure even wear.

Congratulations your futon is now assembled! To operate your new E-frame simply set the back support legs into the rear channels on the Square tube legs **Part #B** for sofa position. In order to make into bed position lift the back support legs from the rear channels (sometimes the back support legs fit snug into the channels) and pull the back section away from the rest of the frame. Make sure to swivel the center curved tube support legs **Part C & D** toward the rear of the frame for maximum support.

Lay gripper on the top of the seat section to keep the mattress from slipping. The mattress works best with slip cover if it is double folded on the seat.



Sofa Position with Slipcover



Sofa Position