

# 8 easy steps to orbiting... ASSEMBLY AND Inflation Of 15' ORBIT TRAMPOLINE



**STEP 1**

Connect bars and secure with bolts to create orbit frame



**STEP 2**

CONNECT ORBIT MAT TO FRAME by EVENLY connecting the SPRINGS



**STEP 3**

INFLATE TUBE WITH LEAF BLOWER OR SHOP VAC. IN less than 3 MINUTES!!!



**STEP 4**

Place orbit jump surface onto tube



**STEP 5**

Secure jump surface onto tube BY TIGHTENING BAR HOLDERS straps




**STEP 6**

Place orbit spring pad cover onto jump surface



**STEP 7**

SECURE LADDER ONTO ORBIT

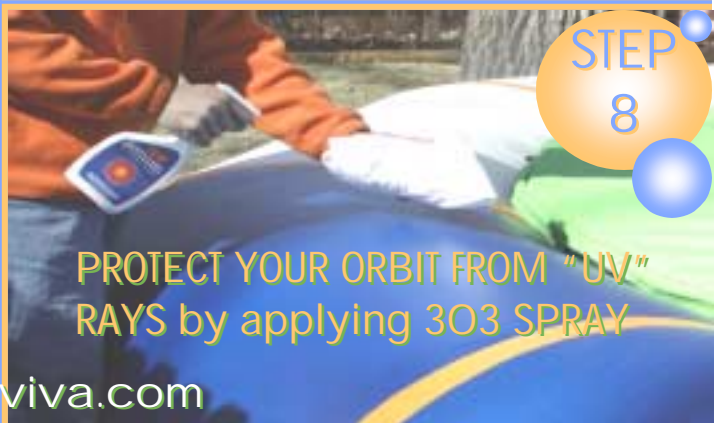

**STEP 8**

PROTECT YOUR ORBIT FROM "UV" RAYS by applying 303 SPRAY