

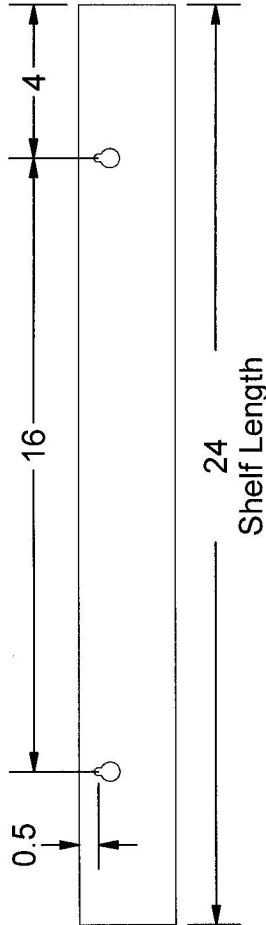
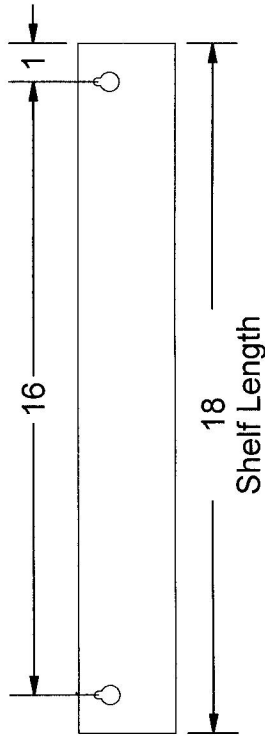


Assembly Instructions

- 1) Select the drawing with the correct Shelf length and drill holes accordingly.
- 2) Screw the supplied sheet metal screws into studs where possible, otherwise use the metal wall anchors.
- 3) Place the Frame on the screws and tighten until Frame is level.
- 4) Place Shelf over Frame, it will lock in place.

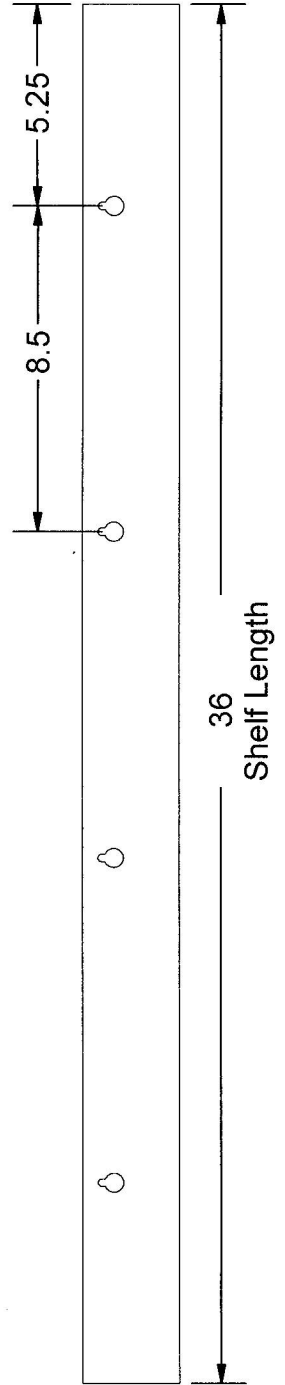

1/8 Drill for Sheet Metal Screws
3/8 Drill for Wall Anchors

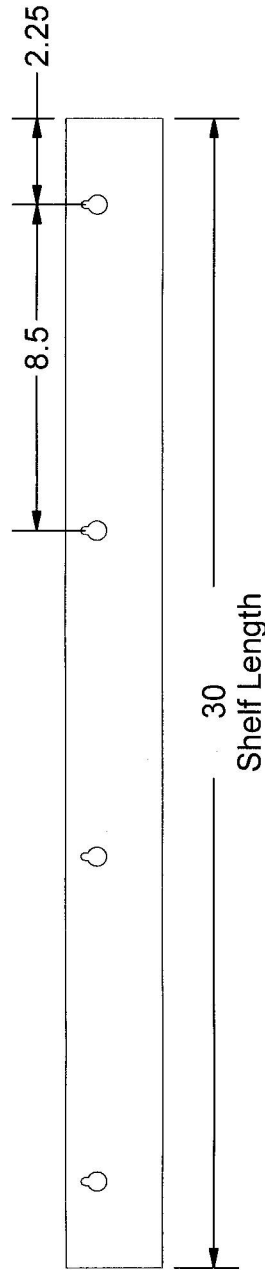

Danver
Wallingford, Ct. 06492
Call 1-888-441-0537
with any questions.