


FIGURE 1.
Generic graphic for illustrative clarity.

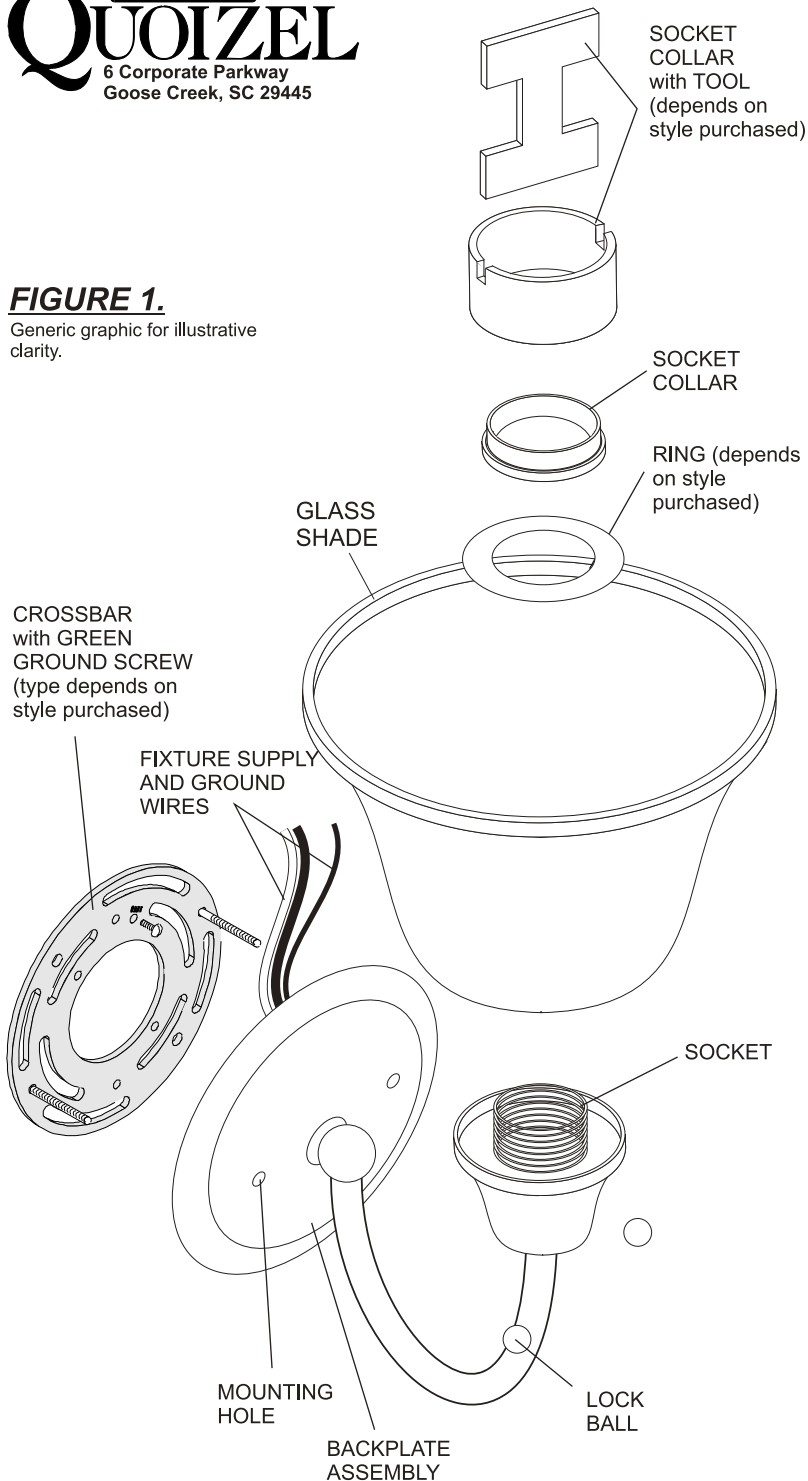

Note: quantities of some parts depends on style purchased.


ASSEMBLY/ INSTALLATION INSTRUCTIONS:

1. Before beginning the assembly/installation, carefully unpack and identify all parts, referring to the illustration (see FIGURE 1). Note: part quantity depends on style purchased.
2. Turn the electrical power to the installation point **OFF**.
3. Fasten the CROSSBAR to the OUTLET BOX, using (2) OUTLET BOX SCREWS (not included). (Note that crossbar type depends on style purchased. UNIVERSAL CROSSBAR shown (refer to FIGURE 3). If CROSSBAR supplied is CENTER LOCK CROSSBAR, thread HEX NUT onto NIPPLE. Pass LOCK WASHER over NIPPLE and thread NIPPLE into center of CROSSBAR. Snug HEX NUT against CROSSBAR with pliers to secure.
4. **Make the wiring connections: (Quoizel recommends (2) people for the next 2 steps).** Using the GROUND SCREW, connect the HOUSE GROUND WIRE and the FIXTURE GROUND WIRE to the CROSSBAR. Using wire connectors (not supplied) connect the HOUSE WHITE WIRE to the FIXTURE WHITE (or RIBBED) WIRE(S); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE BLACK (or SMOOTH) WIRE(S). Make sure that there are no exposed wires or strands and wrap all connections with approved electrical tape.
5. (Refer to Figure 2: Depending on style purchased, a fixture may be oriented with SHADE(S) facing up (as illustrated) or facing downward. A fixture that is to be installed in only one direction will have a sticker as illustrated in Figure 2 on the inside of fixture backplate. Failure to follow sticker instruction could result in fire and/or damage to fixture) Carefully tuck all wiring into the OUTLET BOX, and position the BACKPLATE ASSEMBLY over the MOUNTING SCREWS on the CROSSBAR. Pass the screws through the (2) MOUNTING HOLES on BACKPLATE ASSEMBLY and secure to wall with LOCK BALLS. For fixtures using CENTER LOCK CROSSBAR, pass center hole in BACKPLATE ASSEMBLY over NIPPLE. Thread LOCK BALL onto NIPPLE and hand tighten until snug.
6. Locate GLASS SHADE and pass hole in bottom over SOCKET. (Note: depending on style purchased, you may have received a metal RING used in shade support. Pass RING over SOCKET). Secure to fixture by threading SOCKET COLLAR onto SOCKET. Hand tighten until snug. (Note: depending on style purchased, you may have received SOCKET COLLAR with TOOL. This system is used in conjunction with very narrow glass SHADES. Thread the SOCKET COLLAR onto end of THREADED SOCKET by hand. Align the slots in SOCKET COLLAR with with TOOL and proceed to tighten collar until snug).
7. Install bulb(s) referring to fixture markings and/or labels for maximum wattage.
8. Restore electrical power to the installation.


FIGURE 2.




FIGURE 3.

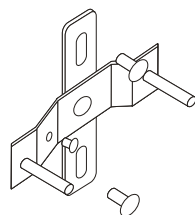

"SWIVEL" type crossbar

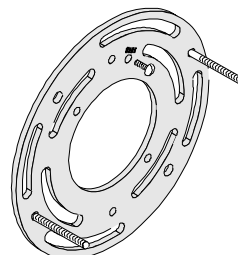

"UNIVERSAL" type crossbar

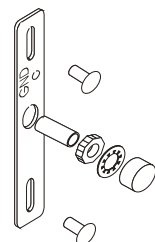

"CENTER LOCK" crossbar