

---

# INSTALLATION INSTRUCTIONS

---


## SLB-U UNIVERSAL SLB

The Universal Smart Lift Bracket™ (SLB-U) provides a solution for simplifying inventory of RPA series mounts and SLB-U projector brackets.

The SLB-U allows for exact alignment with the projector. The projector can be shifted around on the mounting plate until its weight is centered and balanced.

The SLB-U is equipped with adjustable legs and feet, which can be moved to any angle, depending on the mounting-hole pattern on the projector. Leg and foot length, width, and height can readily be adjusted.

The SLB-U is shipped with All-Points™ Security System hardware, which is designed to protect projectors from theft. Chief Manufacturing provides the security kit exclusively.

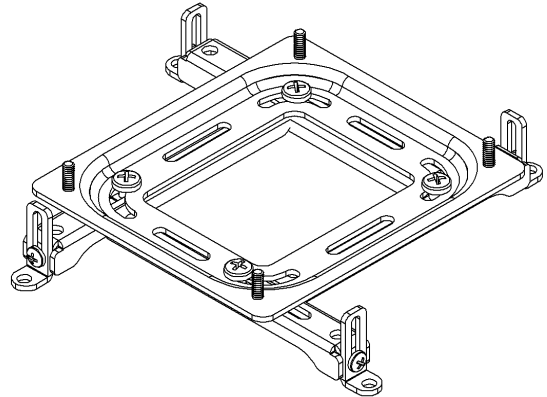

SLB-U

### BEFORE YOU BEGIN

---

- **CAUTION:** To prevent damage to your monitor, which could affect or void the Factory warranty, thoroughly study all instructions and illustrations before you begin to install the mount brackets. Pay particular attention to the Warnings and Cautions in this document.
- If you have any questions about this installation, contact Chief Manufacturing at 1-800-582-6480 or 952-582-6480.

# IMPORTANT WARNINGS and CAUTIONS!


<b>WARNING</b>	A <b>WARNING</b> alerts you to the possibility of serious injury or death if you do not follow the instructions.
<b>CAUTION</b>	A <b>CAUTION</b> alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.
• <b>WARNING</b>	Be aware of the potential for personal injury or damage to the equipment if it is not installed correctly. Consider the weight of the projector mount without the projector.
• <b>WARNING</b>	The installer is responsible for verifying that the projector to which the universal mount is fastened will safely support the combined load of all attached components or other equipment.
• <b>WARNING</b>	The combined weight of the projector placed on the universal mount must not exceed the maximum support weight of the projector.
• <b>WARNING</b>	Watch for pinch points. Do not put your fingers between movable parts.
• <b>CAUTION</b>	Check the unit for shipping damage before you begin the installation.

## TOOLS REQUIRED FOR INSTALLATION

- Phillips screwdriver
- 5/32" Allen Wrench
- Level

**NOTE:** Other tools may be required depending on your method of installation.

## DIMENSIONS

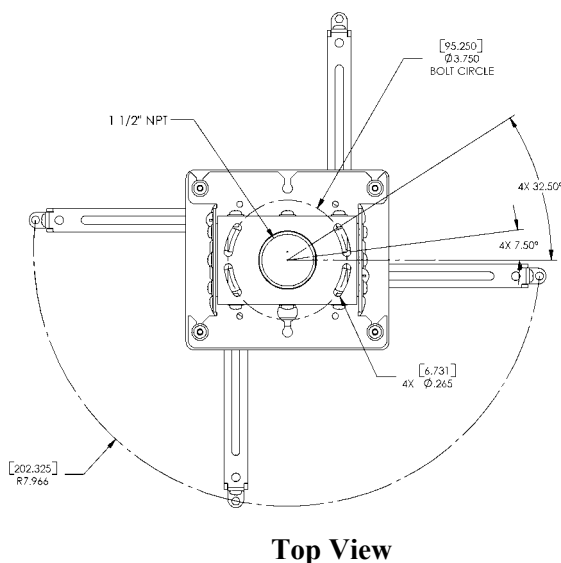


**Top View**

## SHIPPING CONTENTS

**BEFORE PROCEEDING:** Unpack the carton. Verify contents listed in:

- **Error! Reference source not found.** and Figure 1. SLB-U Assembly on page 4.
- Table 7 and Figure 15. All-Points™ Security System Kit on page 11.

Read installation instructions completely. If you are missing any of the listed components, contact Customer Service at: 1-800/582-6480.

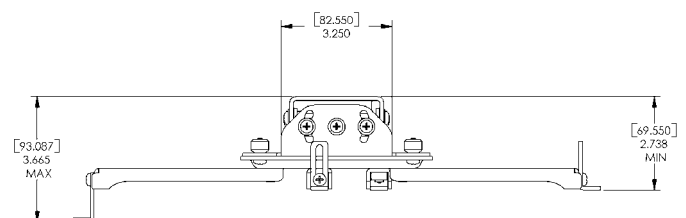

**Front View**

# CONTENTS

TOOLS REQUIRED FOR INSTALLATION ..... 2

DIMENSIONS ..... 2

SHIPPING CONTENTS ..... 2

MOUNTING HARDWARE ..... 3

PARTS ..... 4

INSTALLATION INSTRUCTIONS ..... 5

Measuring the Mounting Hole Dimensions On the Projector ..... 5

Adjusting the Legs on SLB-U ..... 6

    Aligning the SLB-U (as shipped) on a Projector with 4 Mounting Holes ..... 6

    Aligning the SLB-U (minus 1 adjustable leg) on a Projector with 3 Mounting Holes ..... 7

    Aligning the SLB-U (using horizontal slot) on a Projector with 3 Mounting Holes ..... 8

    Aligning the SLB-U on a Projector using direct mounting option ..... 9

Adjusting Foot Height on SLB-U ..... 10

Positioning the SLB-U on the Projector ..... 10

ALL-POINTS SECURITY KIT ..... 11

# MOUNTING HARDWARE

**Table 1. Mounting Hardware**

ITEM	DESCRIPTION	QTY	NOTES
10	SLB-U Assembly	1	
20	M6 x 12mm Phillips Pan Head Screw	4	Used with M6 Flat Washers (60)
30	M5 x 12mm Phillips Pan Head Screw	4	
40	M4 x 12mm Phillips Pan Head Screw	4	Used with M4 Flat Washers (70)
50	M3 x 10mm Phillips Pan Head Screw	4	
60	M6 Flat Washer Used with screws (20) and (30)	4	
70	M4 Flat Washer Used with screws (40) and (50)	4	
80	10-24 Thumb Nuts	4	Used to attach SLB-U to RPA

**Table 2. Direct Mounting (without foot brackets)**

ITEM	DESCRIPTION	QTY	NOTES
90	M6 x 25mm Phillips Pan Head Screw	4	Used with M6 Flat Washers (60)
100	M5 x 25mm Phillips Pan Head Screw	4	
110	M4 x 25mm Phillips Pan Head Screw	4	Used with M4 Flat Washers (70)
120	M3 x 25mm Phillips Pan Head Screw	4	

# PARTS

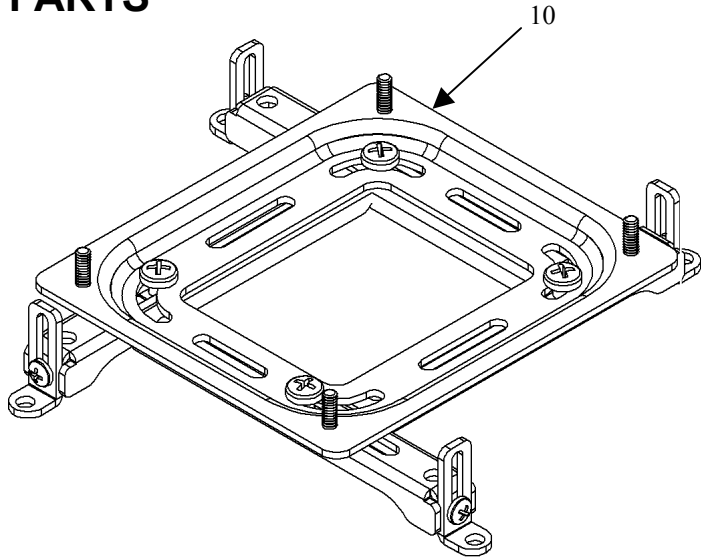


Figure 1. SLB-U Assembly

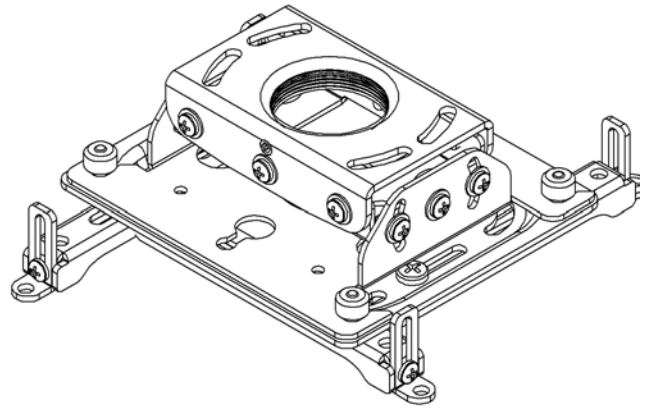


Figure 2. SLB to RPA

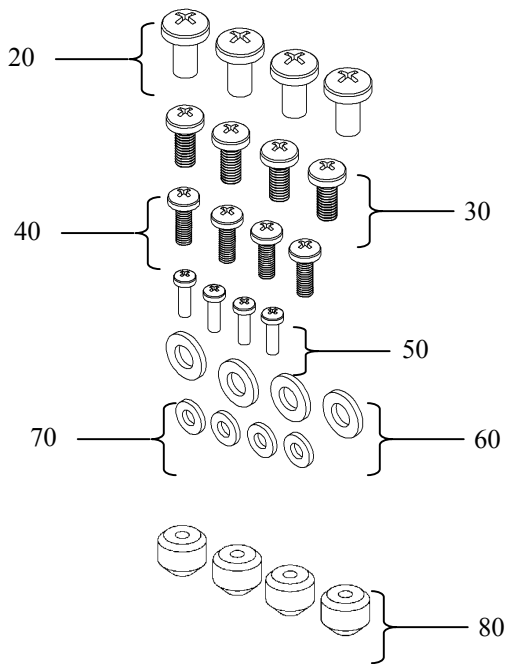


Figure 3. Mounting Hardware Kit

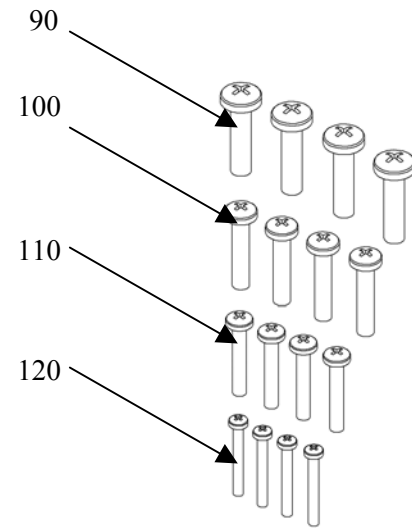


Figure 4. Direct Mounting (without foot brackets)


# INSTALLATION INSTRUCTIONS

## STEP 1 (Optional)

### Measuring the Mounting Hole Dimensions On the Projector


To minimize error, perform the following steps to measure the approximate width and length between the mounting holes on your projector.

1. Determine the width and length between the mounting holes on your projector. If necessary, use a tape measure.
  - a. If your projector is equipped with four mounting holes, measure the width and length between the mounting holes (see Figure 5).
  - b. If your projector is equipped with three mounting holes, measure the width and length between the mounting holes (see Figure 6).
2. Record the dimensions taken in step 1 for later use in the next procedure.

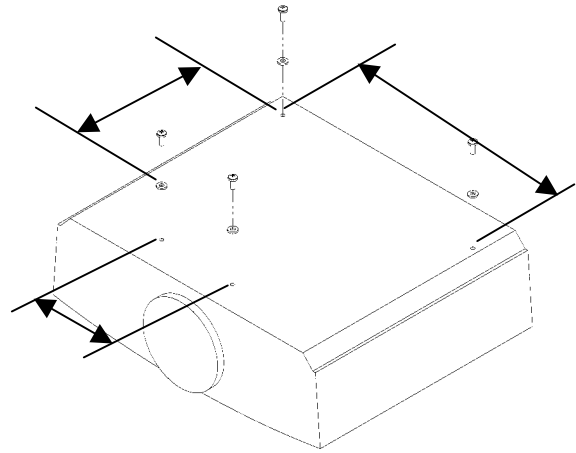

**Figure 5. Measure Width and Length Between Mounting Holes in 4-Hole Projector (Example)**

OR

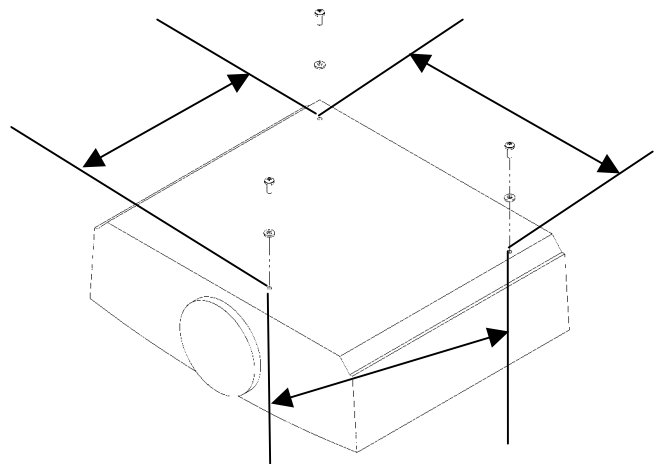

**Figure 6. Measure Width and Length Between Mounting Holes in 3-Hole Projector (Example)**

## STEP 2

### Adjusting the Legs on SLB-U

The mounting holes on projectors are supplied in a variety of different patterns. There is no standard mounting-hole configuration pattern for projectors.

The SLB-U will generally accommodate the mounting-hole pattern on most projectors, providing that the SLB-U adjustable legs can be configured to match the mounting holes on your projector.

Due to the number of configurations that the SLB-U can accommodate, this instruction guide only provides guidance for the three most commonly used SLB-U configurations on projectors. Select the applicable procedure to mount the SLB-U on your projector:

- Step 2 (Option A). Align the SLB-U on a projector with **4 mounting holes**.
- Step 2 (Option B). Align the SLB-U on a projector with **3 mounting holes**.
- Step 2 (Option C). Align the SLB-U on a projector **using horizontal slot and 3 mounting holes**.
- Step 2 (Option D). Align the SLB-U on a projector **using direct mounting option**.

### STEP 2 (OPTION A)

#### Aligning the SLB-U (as shipped) on a Projector with 4 Mounting Holes

Align the SLB-U on the projector, as follows:

1. Locate the **four mounting holes** on your projector.
2. Using a Phillips screwdriver, loosen the four screws. Do not remove the screws.


**NOTE:** If necessary, use the measurements that you recorded when you completed Step 1, “Measuring the Mounting Holes On Projector” to help align the adjustable legs with the mounting-hole pattern on the projector.

3. Align the SLB-U on projector, as follows:
  - a. Place the SLB-U (10) on your projector.
  - b. Adjust the legs on the SLB-U (10) as needed. Align the adjustable legs on the SLB-U with mounting holes on your projector.

4. Attach the SLB-U to the projector, as follows:
  - a. Select the screw size that fits the threaded inserts on your projector (see Table 3).
  - b. Select the washer that fits the selected screw.
  - c. Attach the SLB-U to the projector using the selected fasteners in accordance with Table 3. Do not tighten the screws at this time.
5. Attach the SLB-U to RPA (see Figure 2).

**Table 3. SLB-U Mounting Hardware**

ITEM	DESCRIPTION	QTY	NOTES
20	M6 X 12MM SCREW	4	USE ITEM 60 WITH ITEMS 20 AND 30
30	M5 X 12MM SCREW	4	
40	M4 X 12MM SCREW	4	USE ITEM 70 WITH ITEMS 40 AND 50
50	M3 X 10MM SCREW	4	
60	M6 FLAT WASHER	4	
70	M4 FLAT WASHER	4	
80	10-24 THUMB NUT	4	USE TO ATTACH SLB-U TO RPA

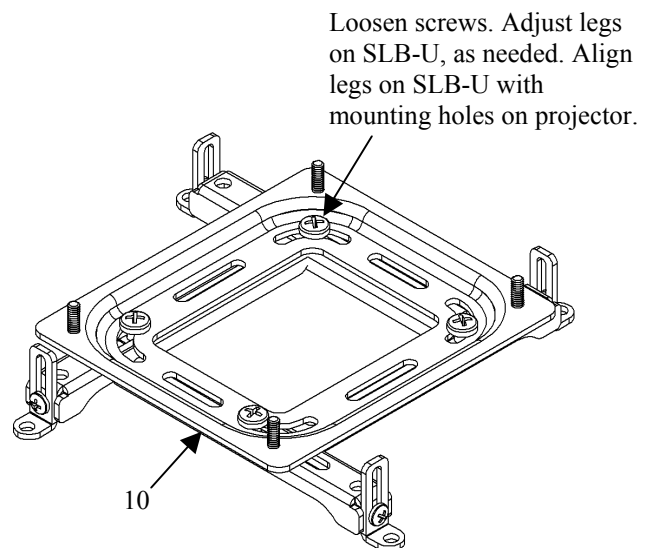

**Figure 7. Align the SLB-U on 4-Hole Projector**

## STEP 2 (OPTION B)

### Aligning the SLB-U (minus 1 adjustable leg) on a Projector with 3 Mounting Holes

Align the SLB-U on the projector, as follows:


1. Locate the **three mounting holes** on your projector.
2. Using a Phillips screwdriver, remove the screw, hex nut, and one adjustable leg from the SLB-U (10) (see Figure 8).

**NOTE:** Keep unused adjustable leg and attaching hardware in a safe for future use.

3. Loosen the three remaining screws. Do not remove the screws.

**NOTE:** If necessary, use the measurements that you recorded when you completed Step 1, “Measuring the Mounting Holes On Projector” to help align the adjustable legs with the mounting-hole pattern on the projector.

4. Align the SLB-U on the projector, as follows:
  - a. Place the SLB-U (10) on your projector.
  - b. Adjust the legs on the SLB-U (10) as needed. Align the adjustable feet on the SLB-U with mounting holes on your projector.
5. Attach the SLB-U to the projector, as follows:
  - a. Select the screw size that fits the threaded inserts on your projector (see Table 4).
  - b. Select the washer that fits the selected screw.
  - c. Attach the SLB-U to the projector using the selected fasteners in accordance with Table 4. Do not tighten the screws at this time.

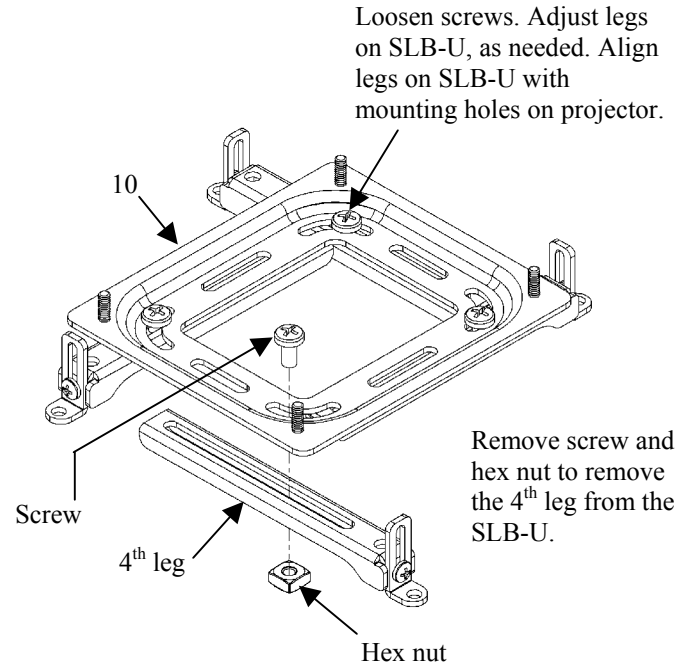

**Figure 8. Align the SLB-U on 3-Hole Projector**

**Table 4. SLB-U Mounting Hardware**

ITEM	DESCRIPTION	QTY	NOTES
20	M6 X 12MM SCREW	4	USE ITEM 60 WITH ITEMS 20 AND 30
30	M5 X 12MM SCREW	4	
40	M4 X 12MM SCREW	4	USE ITEM 70 WITH ITEMS 40 AND 50
50	M3 X 10MM SCREW	4	
60	M6 FLAT WASHER	4	
70	M4 FLAT WASHER	4	
80	10-24 THUMB NUT	4	USE TO ATTACH SLB-U TO RPA

6. Attach the SLB-U to RPA (see Figure 2).

## STEP 2 (OPTION C)

### Aligning the SLB-U (using horizontal slot) on a Projector with 3 Mounting Holes

Align the SLB-U on the projector, as follows:

1. Locate the **three mounting holes** on your projector.
2. Using a Phillips screwdriver, remove two screws, hex nuts, and two adjustable legs from the SLB-U (10) (see Figure 9).

**NOTE:** Keep unused adjustable leg and attaching hardware in a safe for future use.

3. Select the applicable horizontal slot to install the adjustable leg (see Figure 9 and Figure 10).
4. Loosen the three remaining head screws. Do not remove the screws.

**NOTE:** If necessary, use the measurements that you recorded when you completed Step 1, “Measuring the Mounting Holes On Projector” to help align the adjustable legs with the mounting-hole pattern on the projector.


5. Align the SLB-U on the projector, as follows:
  - a. Place the SLB-U (10) on your projector.
  - b. Adjust the legs on the SLB-U (10) as needed. Align the adjustable feet on the SLB-U with mounting holes on your projector.
6. Attach the SLB-U to the projector, as follows:
  - c. Select the screw size that fits the threaded inserts on your projector (see Table 5).
  - d. Select the washer that fits the selected screw.
  - e. Attach the SLB-U to the projector using the selected fasteners in accordance with Table 5. Do not tighten the screws at this time.

**Table 5. SLB-U Mounting Hardware**

ITEM	DESCRIPTION	QTY	NOTES
20	M6 X 12MM SCREW	4	USE ITEM 60 WITH ITEMS 20 AND 30
30	M5 X 12MM SCREW	4	
40	M4 X 12MM SCREW	4	USE ITEM 70 WITH ITEMS 40 AND 50
50	M3 X 10MM SCREW	4	
60	M6 FLAT WASHER	4	
70	M4 FLAT WASHER	4	
80	10-24 THUMB NUT	4	USE TO ATTACH SLB-U TO RPA

7. Attach the SLB-U to RPA (see Figure 2).


Loosen screws. Adjust legs on SLB-U, as needed. Align legs on SLB-U with mounting holes on projector.

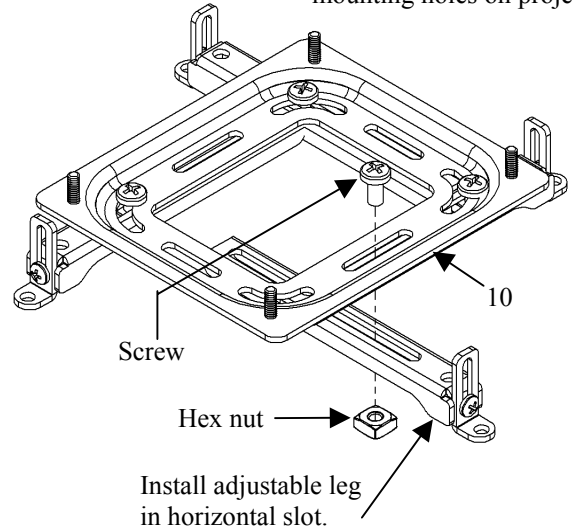

**Figure 9. Align the SLB-U on 3-Hole Projector Using Horizontal Slots**

**OR**

Loosen screws. Adjust legs on SLB-U, as needed. Align legs on SLB-U with mounting holes on projector.

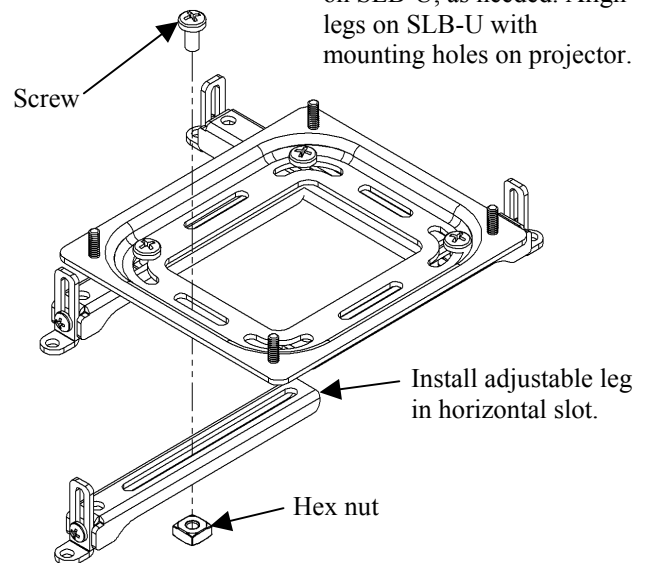

**Figure 10. Align the SLB-U on 3-Hole Projector Using Horizontal Slots**

## STEP 2 (OPTION D)

### Aligning the SLB-U on a Projector using direct mounting option

Align the SLB-U on the projector, as follows:

1. Locate the **mounting holes** on your projector.
2. Using a Phillips screwdriver, remove foot bracket screws and foot brackets (see Figure 11).


**NOTE:** Keep unused adjustable foot brackets and attaching hardware in a safe for future use.

3. Align the SLB-U on the projector, as follows:
  - a. Place the SLB-U (10) on your projector.
  - b. Adjust the legs on the SLB-U (10) as needed. Align the legs on the SLB-U with mounting holes on your projector.
4. Attach the SLB-U to the projector, as follows:
  - a. Select the screw size that fits the threaded inserts on your projector (see Table 6).
  - b. Select the washer that fits the selected screw.
  - c. Attach the SLB-U to the projector using the selected fasteners in accordance with Table 6 (see Figure 12). Do not tighten the screws at this time.


**Table 6. SLB-U Mounting Hardware**

ITEM	DESCRIPTION	QTY	NOTES
90	M6 x 25mm Phillips Pan Head Screw	4	Used with M6 Flat Washers (60)
100	M5 x 25MM PHILLIPS PAN HEAD SCREW	4	
110	M4 x 25mm Phillips Pan Head Screw	4	Used with M4 Flat Washers (70)
120	M3 x 25MM PHILLIPS PAN HEAD SCREW	4	

5. Attach the SLB-U to RPA (see Figure 2).

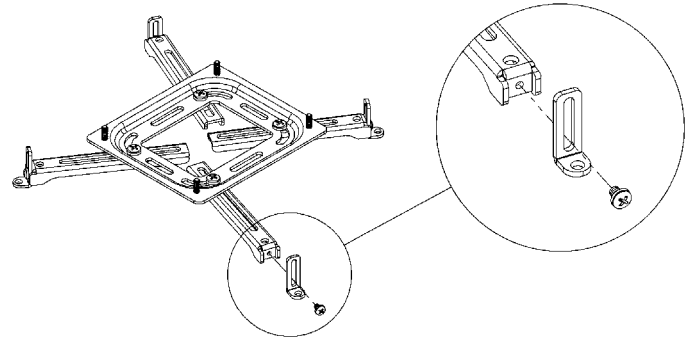

**Figure 11. Remove Feet**

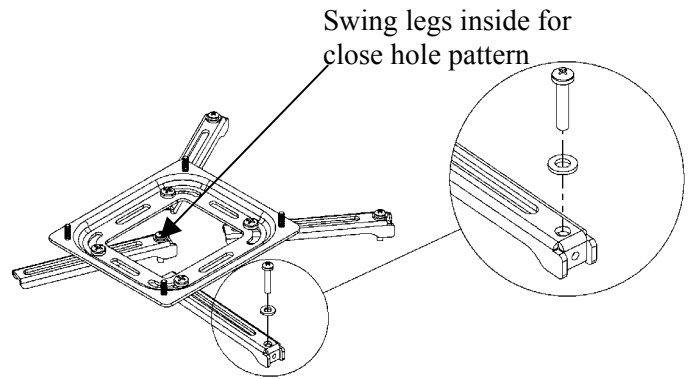

**Figure 12. Install the SLB-U on Projector**


## STEP 3

### Adjusting Foot Height on SLB-U

Adjust the feet on the SLB-U for height, as follows:

**NOTE:** Foot height is adjusted for a variety of reasons, which includes, but is not limited to, ventilation, uneven projector surface, and to level the RPA mounting plate.

1. Visually check the height of the RPA mounting plate on the SLB-U. Review the reasons for foot height adjustment, noted above.
2. Loosen the screw and adjust the foot that is attached to the adjustable leg on the SLB-U (see Figure 13).
3. Adjust foot height as needed. If necessary, use a level to verify that the RPA mounting plate is level.
4. Tighten the screw.
5. Repeat procedure for each foot as needed until the feet on the SLB-U are adjusted to your satisfaction.

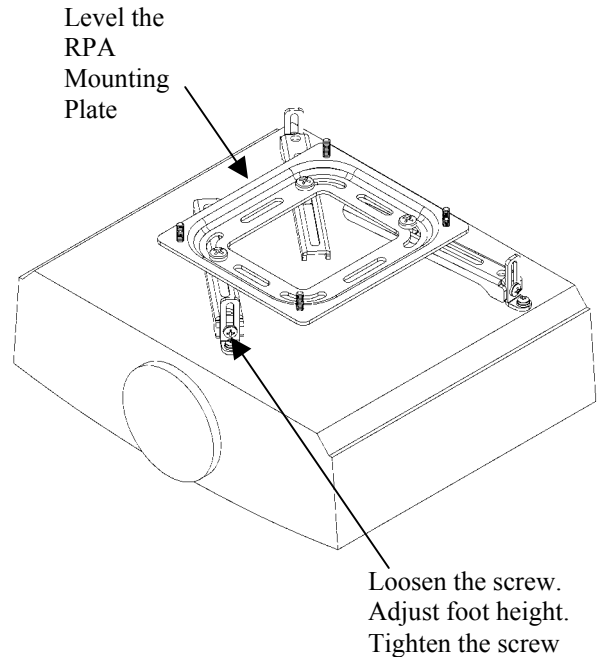

**Figure 13. Adjust Leg Height on SLB-U**

## STEP 4

### Positioning the SLB-U on the Projector

Position the on the SLB-U on your projector, as follows:

**NOTE:** When positioning the SLB-U on your projector, take into consideration the weight of the projector and its center of gravity.


1. Slide the SLB-U into the position that you want on your projector.

#### **WARNING**

Failure to tighten the screws after positioning the SLB-U on your projector could result in damage to your projector.

2. Tighten the screws shown in Figure 14.

**NOTE:** For further instructions, see the applicable RPA and/or Smart-lift™ instruction manuals.

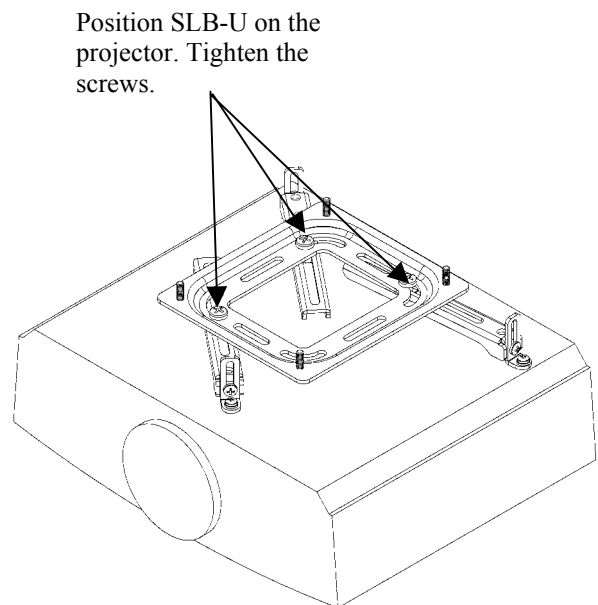

**Figure 14. Position the SLB-U and Tighten the Screws**

## STEP 5 (Optional)

### ALL-POINTS SECURITY KIT


For All-Points™ Security, use the security hardware package inside the All-Points™ Security Kit. Follow the instructions for attaching the bracket to the projector using either standard hardware or security hardware.

**NOTE:** You must retain the Security Allen Wrench if security screws are installed. Do not discard this wrench or leave it where unauthorized persons have access to your Security Allen Wrench.

Table 7 and Figure 15. All-Points™ Security System Kit shows the All-Points™ Security Kit parts.

**Table 7. All-Points™ Security Kit Parts**

ITEM	DESCRIPTION	QTY	NOTES
130	M3 x 10mm Button Head Security Screw	4	SLB-U Mounting Hardware
140	M4 x 12mm Button Head Security Screw	4	
150	M5 x 12mm Button Head Security Screw	4	
160	M6 x 12mm Button Head Security Screw	4	
170	10-24 x 1/4" Flat Head Undercut Security Screw	2	RPA to SLB-U
180	3/32" Security Hex Key	1	Special Tools
190	5/32" Security Hex Key	1	
200	5/16-18 Security Set Screw	1	RPA
210	10-24 x 3/8" Button Head Security Screw	4	
220	1/4-20 x 1/2" Button Head Security Screw	4	SLB-U Leg Attachment
230	10-24 x 1/4" Button Head Security Screw	4	SLB-U Feet Attachment

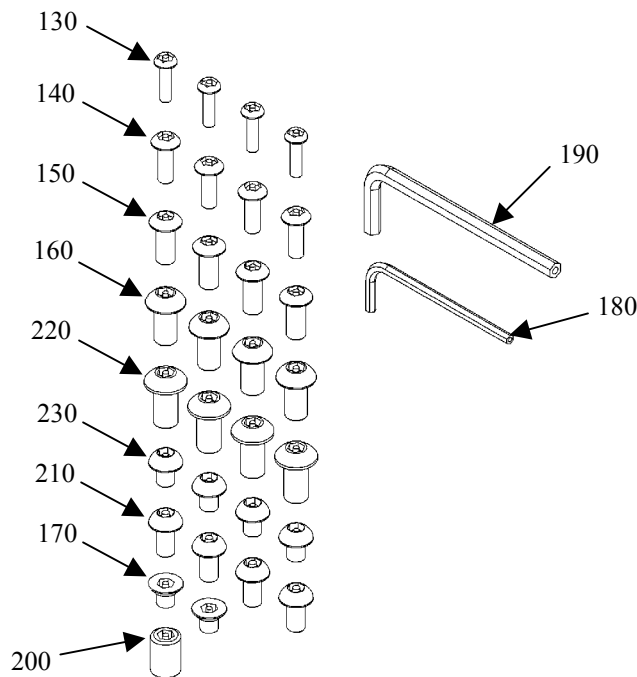

**Figure 15. All-Points™ Security System Kit**

